



Installation instructions for battery cabinet

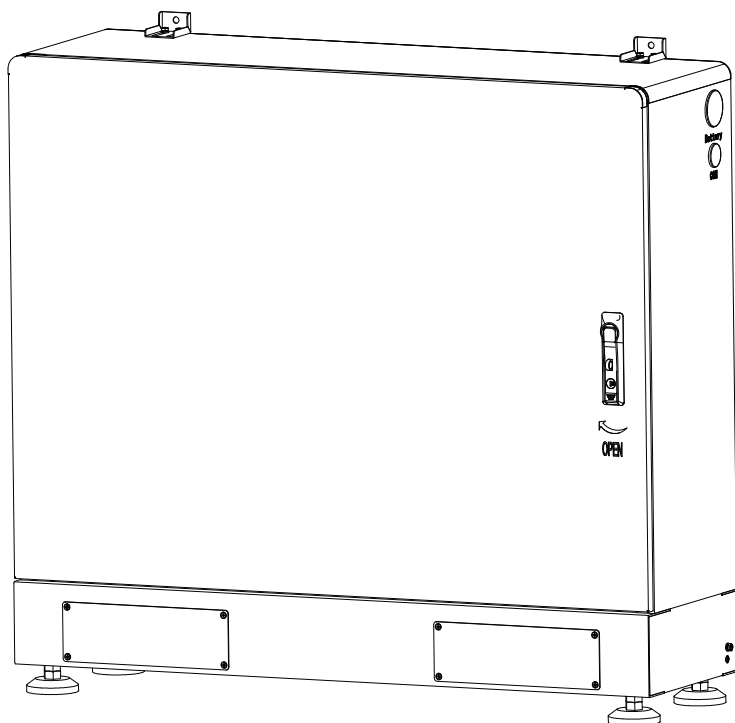


Overall size

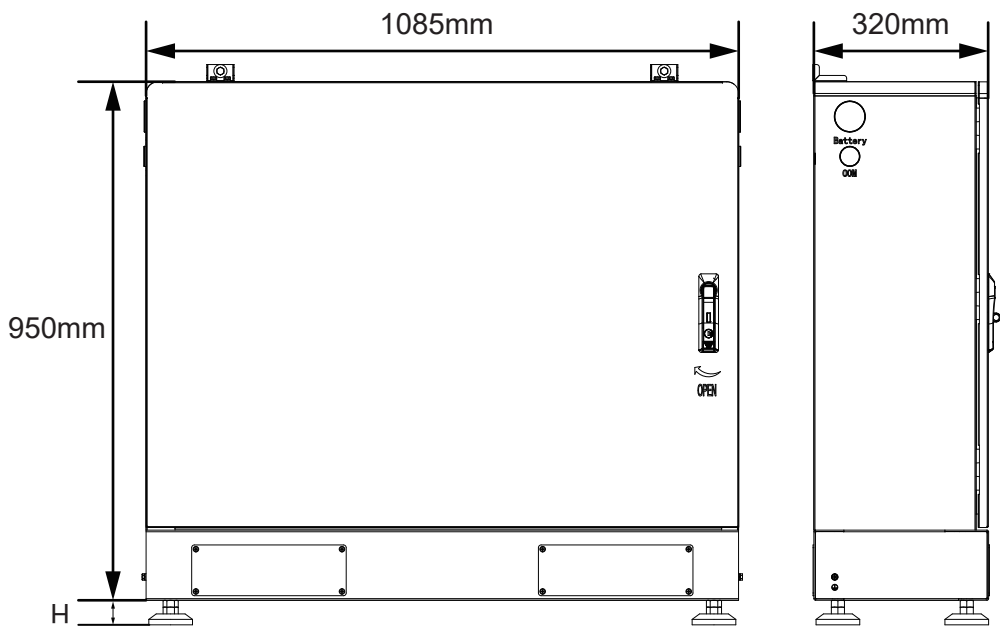


H size is adjustable, with an adjustment range of 45mm to 95mm.

Parts List

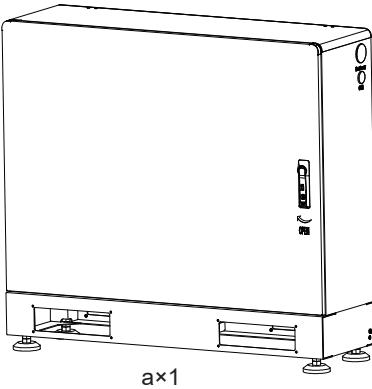

b×2

 

c×4



d×4



e×16
(M4)



f×4
(M6)



g×8
(M6)



h×2




i×2
(M8)

a.Battery cabinet enclosure	b.Wall-mounted L-shaped bracket
c.Forklift access cover plate	d.Battery pack mounting bracket
e. Phillips countersunk head screw(M4)	f.Tri-grip screw(M6)
g.Flange nut(M6)	h.Washer
i.Hex head self-drilling screw(M8)	

Technical Data


Model	SE-G5.1-Pro-B-Cabinet
IP Rating of Enclosure	IP65
Bearing Capacity	≤300kg
Weight Approximate	75kg
Dimension (W/D/H, mm)	1085×320×950mm
Altitude	≤3000m
Recommended Operating Temperature	-20℃~+55℃
Reference standard	UL2416,UL60950-1,EIA-310-E
Warranty	10 Years
Color	White(RAL9016)
Material	SGCC
Applicable to the Product	SE-G5.1-Pro-B,SE-G5.3,SE-G5.1 or other 3U batteries

Installation Step 1

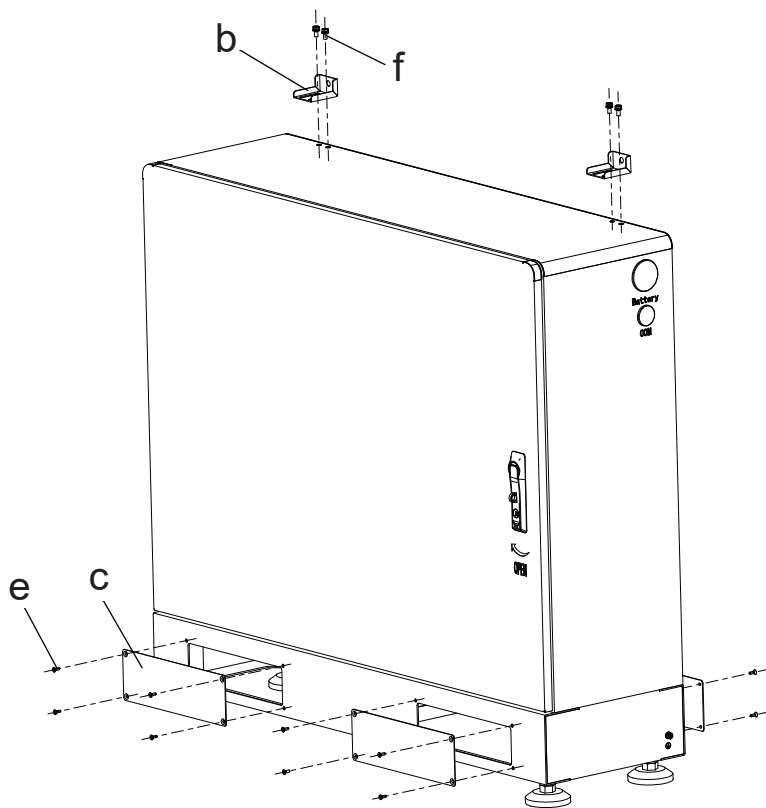

Installation Step 2

Make adjustment to keep the cabinet level.

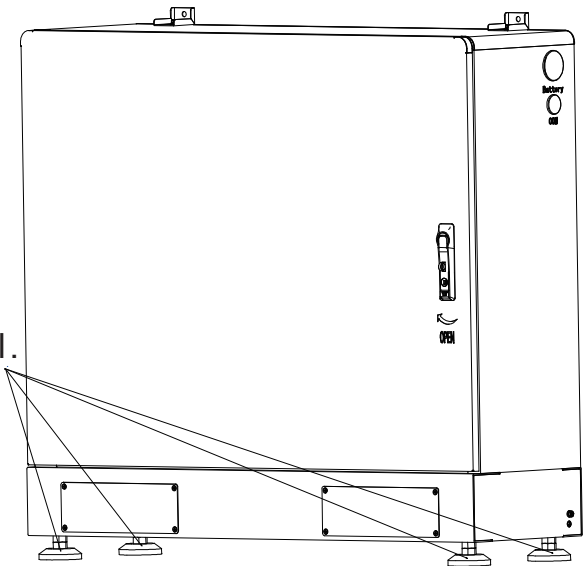


Installation Step 3


Information on drilling holes:

*Diameter: 6.0mm~6.5mm;

*Depth:90mm ~ 110mm

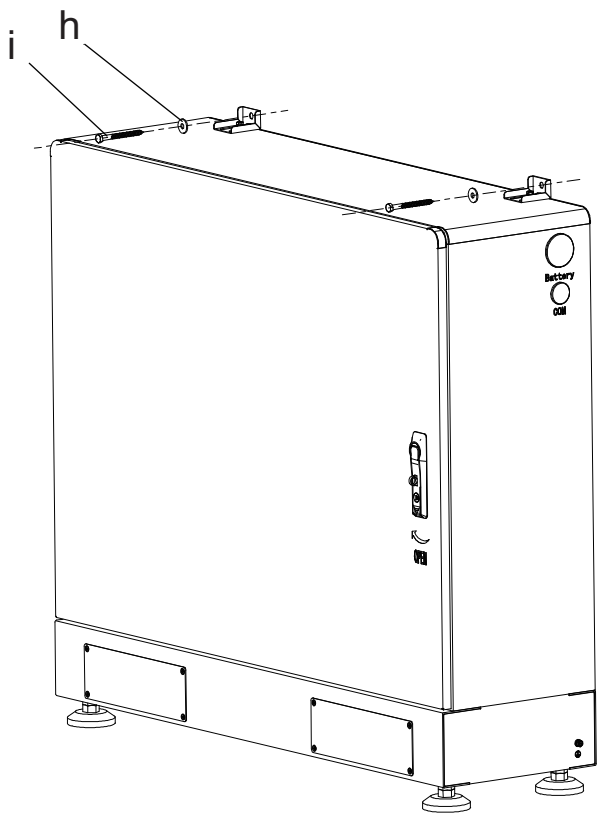


Installation Step 4

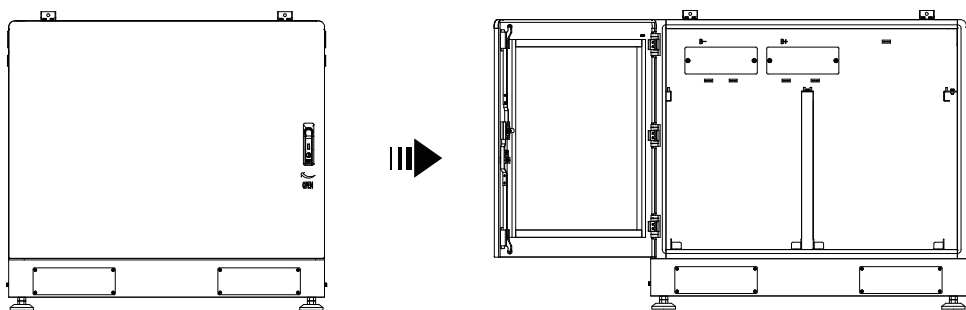

Insert and turn the key clockwise to open the door.

Installation Step 5

Place batteries into the cabinet.

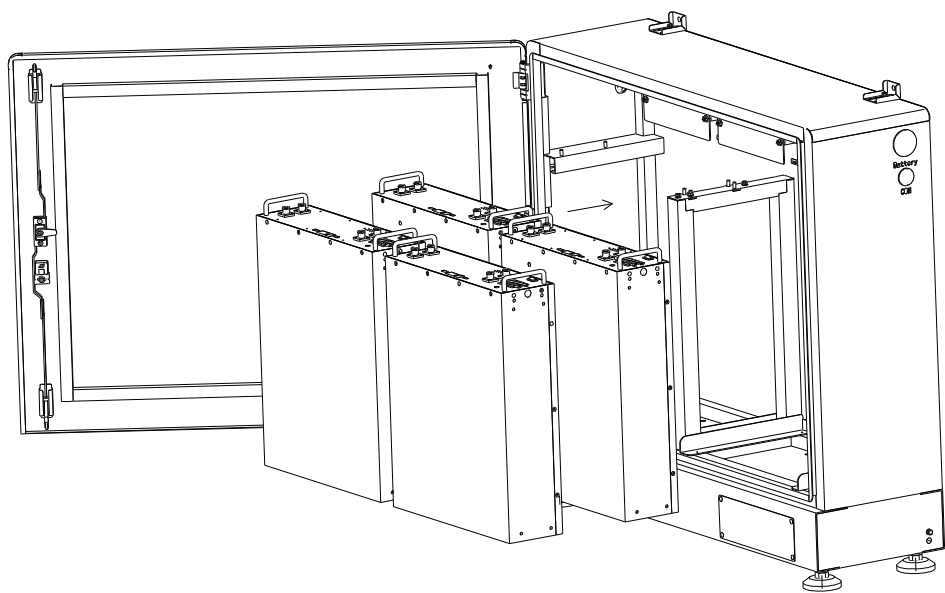

Installation Step 6

Secure batteries to the cabinet as shown in the picture.

